





# Blade Installation for a King Arthur Straight Lame

Lame bottom disc half

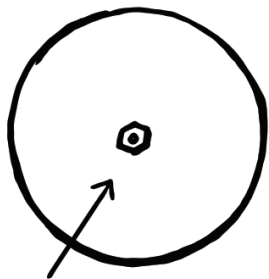

Hex nut with hole

1.

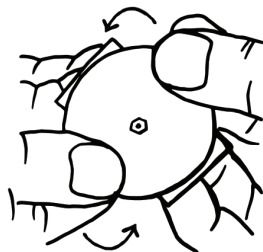


Rotate bottom disc of lame counterclockwise until you can separate the top and bottom halves.

2.



Carefully remove and unwrap the blade.

3.

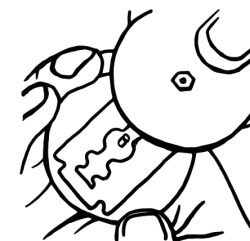

Center the blade on the protruding center screw of the top half of the lame, then reassemble and align the two lame discs.

4.




Turn the bottom disc clockwise to begin tightening. Do not tighten too much.

5.




After a few turns, when the two discs hold together, shake until the blade drops down.

6.

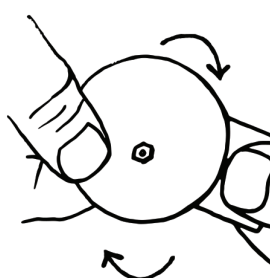

Carefully hold the protruding part of the blade with one hand while rotating the bottom disc clockwise until tight.

7.

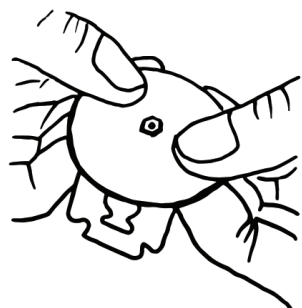

With all fingers underneath and thumbs on top of the lame, carefully tighten until the blade is securely held in place. Do not over tighten! Very little force is required to prevent the blade from moving.

8.



After scoring your bread, hold the lame as shown in step 7 and loosen the two halves. You can now tuck the blade safely inside of the lame and retighten for safe storage.

Keeping lame oiled with food-safe oil will prevent warping and drying. Use a dry, stiff bristle brush to remove any flour residue.

**CAUTION!**  
**RAZOR BLADES ARE VERY SHARP AND CAN INJURE YOU!**

Always keep fingers and body away from the sharp edge of the blade. Keep out of children's reach. Dispose of blades properly. Wire Monkey and the King Arthur Baking Company will not be held responsible for injury.



\* 2 1 1 9 6 7 \*